




# UH360 RH Layout

This configuration is the factory default setting of the switch.

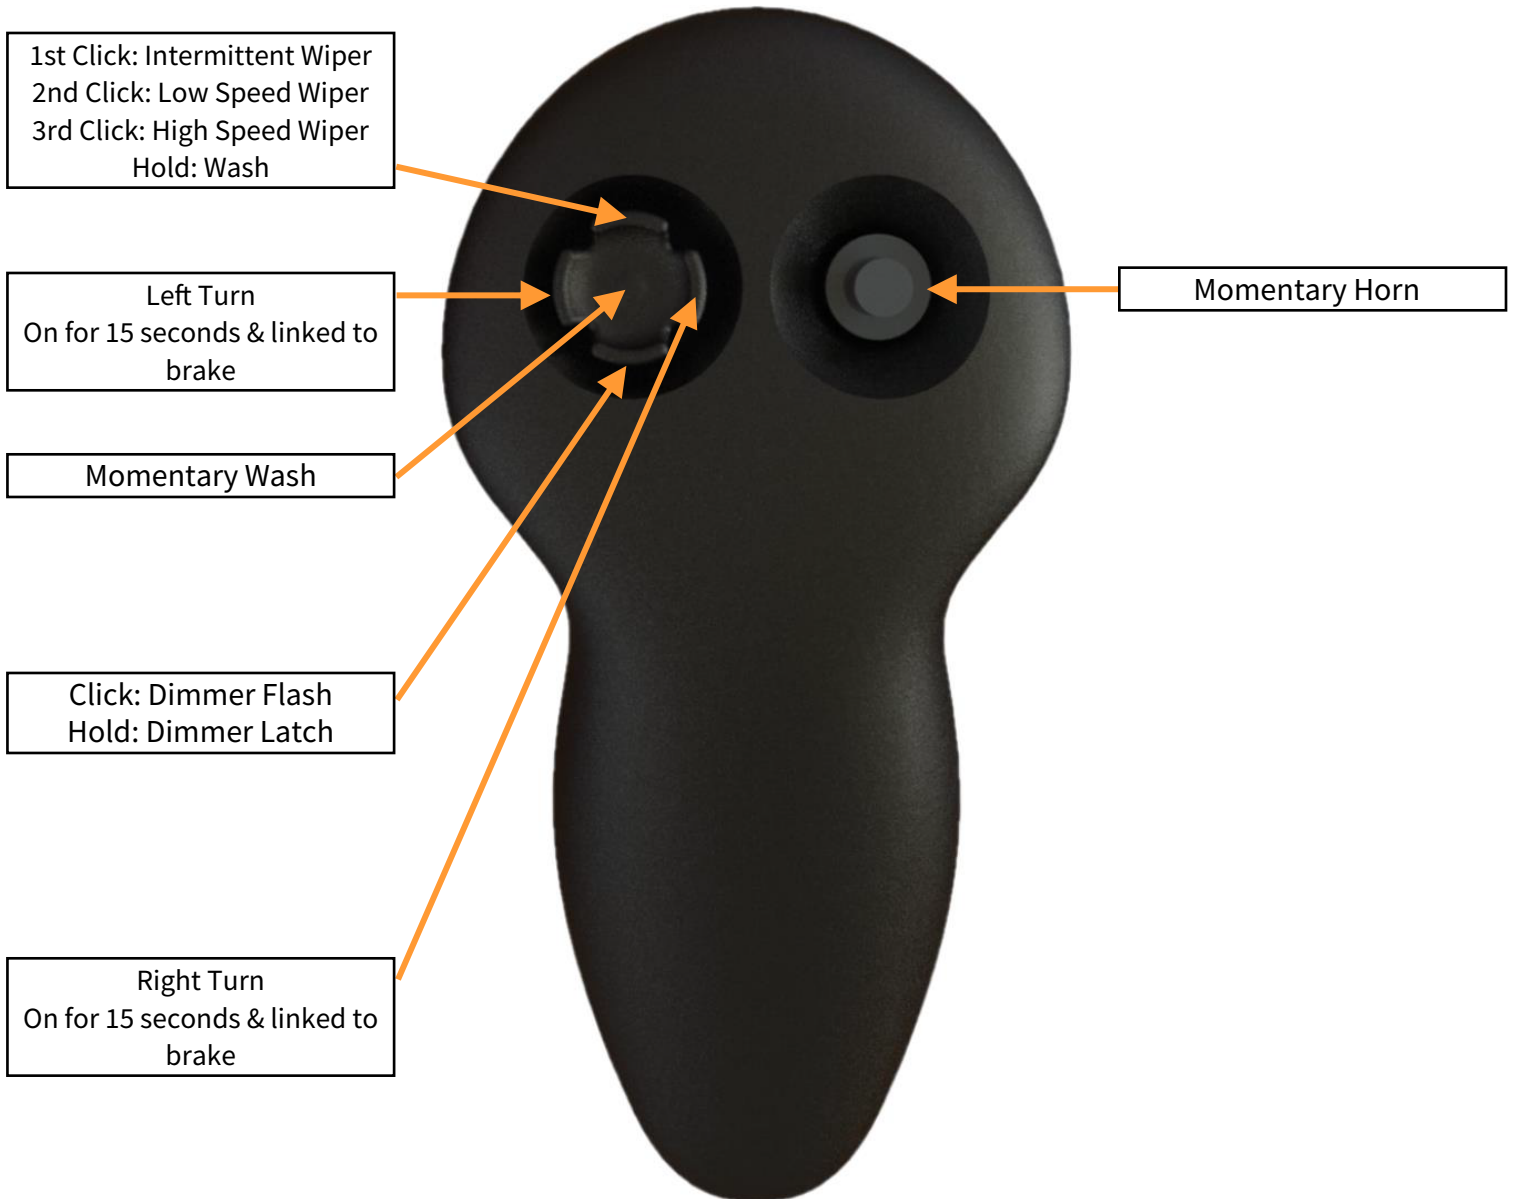

Button swapping can be done on either the wireless device or from the Switch.

To change the function locations please refer to the Switch manual.

